

AUTOOL BT30

OBD Emergency Power Cable

User Manual

用户手册

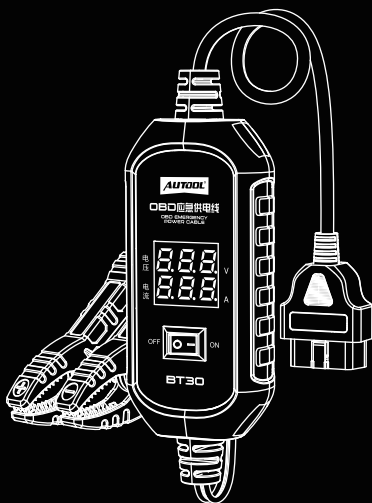


TABLE OF CONTENTS

Copyright Information	2
Copyright.....	2
Trademark	2
Attention	3
Environmental requirements for use	3
Product Overview	3
Product features.....	3
Technical parameters	4
Product Structure	4
Structure diagram	4
Operations	5
Automotive leakage detection	5
Battery replacement	5
Maintenance Service	6
Maintenance	6
Warranty	7
Warranty access	7
Disclaimer	7
Return & Exchange Service	8
Return & Exchange.....	8

COPYRIGHT INFORMATION

Copyright

- All rights reserved by AUTOOL TECH. CO., LTD. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of AUTOOL. The information contained herein is designed only for the use of this unit. AUTOOL is not responsible for any use of this information as applied to other units.
 - Neither AUTOOL nor its affiliates shall be liable to the purchaser of this unit or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this unit, or unauthorized modifications, repairs, or alterations to this unit, or failure to strictly comply with AUTOOL operating and maintenance instructions.
 - AUTOOL shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as original AUTOOL products or AUTOOL approved products by AUTOOL.
 - Other product names used herein are for identification purposes only and may be trademarks of their respective owners. AUTOOL disclaims any and all rights in those marks.
-

Trademark

- Manual are either trademarks, registered trademarks, service marks, domain names, logos, company names or are otherwise the property of AUTOOL or its affiliates. In countries where any of the AUTOOL trademarks, service marks, domain names, logos and company names are not registered, AUTOOL claims other rights associated with unregistered trademarks, service marks, domain names, logos, and company names. Other products or company

names referred to in this manual may be trademarks of their respective owners. You may not use any trademark, service mark, domain name, logo, or company name of AUTOOL or any third party without permission from the owner of the applicable trademark, service mark, domain name, logo, or company name. You may contact AUTOOL by visiting AUTOOL at <https://www.autooltech.com>, or writing to aftersale@autooltech.com, to request written permission to use materials on this manual for purposes or for all other questions relating to this manual.

ATTENTION

- ▶ Before installation and setup, it is essential to thoroughly read this instruction manual.
 - ▶ Prior to use, carefully inspect the packaging list. If you have any inquiries, please promptly contact your dealer or AUTOOL Company.
-

Environmental Requirements for Use

- ▶ During the battery replacement process, ensure the vehicle power switch remains off throughout, with no electrical appliances active to prevent sudden excessive currents.

PRODUCT OVERVIEW

Product Features

- Power management system with a core processor.
- Displays battery voltage (preventing the use of depleted batteries, ensuring uninterrupted power for battery replacement).
- Displays current (for leakage detection or understanding the car's static current when not in operation).
- Reverse polarity protection.


- Over-current protection (includes a built-in 3A fuse).
- Simultaneous display of voltage and current.

Technical Parameters

Operating Voltage	10-14V
Operating Current	<7A
Operating Temperature	-20~60°C

PRODUCT STRUCTURE

Structure Diagram

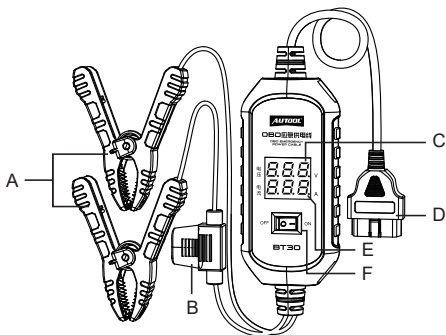

A	Power Clamp	B	Built-in 3A Fuse
C	Voltage Display	D	OBD Interface
E	Current Display	F	Power Switch

Operations

Automotive Leakage Detection

- Prepare a fully-charged spare battery and securely connect the power clamp to the positive and negative terminals of the spare battery (red clamp to positive, black clamp to negative). If connected correctly, the screen will display voltage data.
 - Connect the device's OBD interface to the vehicle's OBD interface. Upon successful connection, the screen will display current data.
 - Disconnect the negative terminal of the car connected to the battery. Observe the current at this point (normally, the current is unstable with fluctuations, such as when car relays work intermittently, resulting in fluctuating current values).
 - Successively remove the fuses from the car's fuse box and observe the change in current. If the current suddenly decreases, it indicates the possibility of leakage from that fuse. Referencing the car's circuit diagram, locate the circuit or device connected to that fuse to identify the leakage.
-

Battery Replacement

- Prepare a fully-charged spare battery and securely connect the power clamp to the positive and negative terminals of the spare battery (red clamp to positive, black clamp to negative). If connected correctly, the screen will display voltage data.
- Connect the device's OBD interface to the vehicle's OBD interface. Upon successful connection, the screen will display current data.
- Remove the old battery from the vehicle and replace it with a new one.

MAINTENANCE SERVICE

- Our products are made of long-lasting and durable materials, and we insist on perfect production process. Each product leaves the factory after 35 procedures and 12 times of testing and inspection work, which ensures that each product has excellent quality and performance.
-

Maintenance

To maintain the performance and appearance of the product, it is recommended that the following product care guidelines be read carefully:

- Be careful not to rub the product against rough surfaces or wear the product, especially the sheet metal housing.
- Please regularly check the product parts that need to be tightened and connected. If found loose, please tighten it in time to ensure the safe operation of the equipment. The external and internal parts of the equipment in contact with various chemical media should be frequently treated with anti-corrosion treatment such as rust removal and painting to improve the corrosion resistance of the equipment and extend its service life.
- Comply with the safe operating procedures and do not overload the equipment. The safety guards of the products are complete and reliable.
- Unsafe factors are to be eliminated in time. The circuit part should be checked thoroughly and the aging wires should be replaced in time.
- Regularly clean and replace consumable parts such as oil pump and oil filter; adjust the clearance of various parts and replace worn (broken) parts. Avoid contact with corrosive liquids.
- When not in use, please store the product in a dry place. Do not store the product in hot, humid, or non-ventilated places.

WARRANTY

- From the date of receipt, we provide a three-year warranty for the main unit and all the accessories included are covered by a one-year warranty.
-

Warranty access

- The repair or replacement of products is determined by the actual breakdown situation of product.
- It is guaranteed that AUTOOL will use brand new component, accessory or device in terms of repair or replacement.
- If the product fails within 90 days after the customer receives it, the buyer should provide both video and picture, and we will bear the shipping cost and provide the accessories for the customer to replace it free of charge. While the product is received for more than 90 days, the customer will bear the appropriate cost and we will provide the parts to the customer for replacement free of charge.

These conditions below shall not be in warranty range

- The product is not purchased through official or authorized channels.
- The product breakdown because the user does not follow product instructions to use or maintain the product.

We AUTOOL pride ourselves on superb design and excellent service. It would be our pleasure to provide you with any further support or services.

Disclaimer

- All information, illustrations, and specifications contained in this manual, AUTOOL reserves the right of modify this manual and the machine itself with no prior notice. The physical appearance and color may differ from what is shown in the manual, please refer to the actual product.

Every effort has been made to make all descriptions in the book accurate, but inevitably there are still inaccuracies, if in doubt, please contact your dealer or AUTOOL after-service centre, we are not responsible for any consequences arising from misunderstandings.

RETURN & EXCHANGE SERVICE

Return & Exchange

- If you are an AUTOOL user and are not satisfied with the AUTOOL products purchased from the online authorized shopping platform and offline authorized dealers, you can return the products within seven days from the date of receipt; or you may exchange it for another product of the same value within 30 days from the date of delivery.
- Returned and exchanged products must be in fully saleable condition with documentation of the relevant bill of sale, all relevant accessories and original packaging.
- AUTOOL will inspect the returned items to ensure that they are in good condition and eligible. Any item that does not pass inspection will be returned to you and you will not receive a refund for the item.
- You can exchange the product through the customer service center or AUTOOL authorized distributors; the policy of return and exchange is to return the product from where it was purchased. If there are difficulties or problems with your return or exchange, please contact AUTOOL Customer Service.

China	400-032-0988
Oversea Zone	+86 0755 23304822
E-mail	aftersale@autooltech.com
Facebook	https://www.facebook.com/autool.vip
YouTube	https://www.youtube.com/c/autooltech

目 录

版权信息	10
版权	10
注册商标	10
注意事项	11
使用环境要求	11
产品简介	11
产品特点	11
技术参数	11
产品结构	12
结构图	12
操作	12
汽车漏电检测	12
更换蓄电池	13
维修保养服务	14
维修保养	14
保修服务	15
保修方式	15
声明	15
退换货服务	16
退换货	16

版权信息

版权

- 版权所有!未征得深圳市偶然科技有限公司的书面同意,任何公司或个人不得以任何形式(电子、机械、影印、录制或其他形式)对本说明书进行复制和备份。本手册专为偶然公司产品的使用而计,对于将之用于指导其他设备操作而导致的各种后果,本公司不承担任何责任。
 - 因使用者个人或第三方的意外事故,滥用、误用该设备,擅自更改,或修理该设备,或未按偶然公司的操作与保养要求而导致设备损坏、遗失所产生的费用及开支等,偶然公司及其分支机构不承担任何责任。
 - **正式声明:**本说明书所提及之其他产品名称,目的在于说明该设备如何使用,其注册商标所有权仍属原公司。
 - 本设备供专业技术人员或维修人员使用。
-

注册商标

- 偶然公司已在中国及海外若干国家进行了商标注册,其标志为 **AUTOTOL®**。本手册所提及之偶然公司其它商标、服务标志、域名、图标、公司名称均属偶然及其下属公司之产权。在偶然公司之商标、服务标志、域名、图标、公司名称还未注册之国家,偶然公司声明其对未注册商标、服务标志、域名、图标、公司名称之所有权。本手册所提及之其它产品及公司名称的商标仍属于原注册公司所有。在未得到拥有人的书面同意之前,任何人不得使用偶然公司或所提及的其它公司之商标、服务标志、域名、图标、公司名称。
- 您可以访问偶然网址:www.autooltech.com,或发送邮件至:aftersale@autooltech.com,与偶然公司进行联系,征得其手册使用权之书面同意。

注意事项

- ▶ 安装调试前应详细阅读本说明书。
 - ▶ 使用前应仔细检查包装清单。如有疑问，请立即与经销商或偶然公司联系。
-

使用环境要求

- ▶ 在更换蓄电池的过程中，全程保证车辆电源开关关闭，无用电器工作，避免产生瞬间过大电流。

产品简介

产品特点


- 带内核处理器的电源管理系统。
 - 可显示蓄电池电压（防止使用亏电的蓄电池，达不到不断电更换蓄电池的目的）。
 - 可显示电流（可以做漏电检测用，也可以了解汽车在不启动状态下的静态电流）。
 - 极性反接保护。
 - 过流保护（自带3A保险片）。
 - 电压和电流同时显示。
-

技术参数

工作电压	10~14V
工作电流	<7A
工作温度	-20~60℃

产品结构

结构图

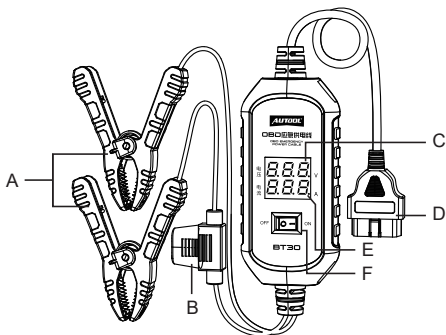

A	电源夹	B	自带3A保险片
C	电压显示	D	OBD接口
E	电流显示	F	电源开关

操作

汽车漏电检测

- 准备一个足额的备用蓄电池，将电源夹紧密连接备用蓄电池的正负极上 (红色电夹接正极，黑色电夹接负极)，连接正确，屏幕会显示电压数据。
- 将设备OBD接口连接车辆OBD接口，连接成功，屏幕会显示电流数据。

- 将汽车连接蓄电池的负极断开。观察此时的电流（一般情况下电流是不稳定的，数值会有波动，例如汽车继电器是工作一下，停止一下，这时对应的电流就是一下高，一下低）。
 - 依次逐个拔下汽车保险盒里的保险片，并观察电流变化，若电流突然变小，证明这个保险片存在漏电的可能。再对照汽车电路图，找到这个保险片连接的电路或者电器，就可以排查出漏电情况。
-

更换蓄电池

- 准备一个足额的备用蓄电池，将电源夹紧密连接备用蓄电池的正负极上（红色电夹接正极，黑色电夹接负极），连接正确，屏幕会显示电压数据。
- 将设备OBD接口连接车辆OBD接口，连接成功，屏幕会显示电流数据。
- 将车上需要更换的蓄电池取下，换上新的蓄电池。

维修保养服务

- 您所拥有的AUTOTOL产品选用持久耐用的材料，AUTOTOL坚持精益求精的生产工艺，每一件产品出厂都经过35道工序及12次质检工作，从而确保每一件产品都拥有卓越的品质及性能。所以您的AUTOTOL产品值得您定期维护保养，使其将能够长期稳定地工作。

维修保养

维护保养是为了保持产品性能和外观，我们建议您仔细阅读以下产品保养指南：

- 注意不要将产品与粗糙表面摩擦或揉搓产品，特别是钣金外壳。
- 对产品中需要紧固和连接的部位经常进行检查，如发现松动应及时紧固，以保证产品的安全运行。对与各种化学介质接触的产品外部和内部零件要经常进行除锈、喷漆等防腐处理，以提高产品的抗腐蚀能力，延长产品的使用寿命。
- 遵守安全操作规程，不超负荷使用产品。产品的安全防护装置齐全可靠，及时消除不安全因素。电路部分彻底检查，老化电线要及时更换。
- 定期清洗和更换油泵、滤油器等易耗部件；调整各部位配合间隙和更换磨损（已坏）部件清洁时，避免产品接触带腐蚀性的液态物品。
- 不使用时，请将产品存放于干燥的位置。不要将产品存放在高温、潮湿或不通风的地方。

保修服务

- AUTOOL主机自客户签收日起享有3年保修期。其所含附件自客户签收日起享有1年保修期。
-

保修方式

- 根据具体的故障情况对产品进行免费修理或更换；
- 我方保证所有更换的部件、附件或产品都是全新；
- 在客户收到产品90天内出现故障同时提供视频和图片，我方承担运费并免费提供相应配件给客户更换。收到产品超过90天，客户承担相应的费用，我方免费提供配件给客户更换；

以下情况不在免费保修范围：

- 非正规渠道购买AUTOOL的产品；
- 未按产品说明书要求使用和维护造成的损坏；

在AUTOOL，我们为精湛的设计和卓越的服务感到自豪。我们很乐意为您提供更多的支持或服务。

声明

- 偶然公司保留更改产品设计与规格的权利，届时恕不另行通知。实物外观与颜色可能与说明书中显示的有差别，请以实物为准。我们已尽最大努力力求使书中所有描述准确，但仍难免有不妥之处。如有疑问，请联系经销商或偶然售后服务中心。本公司对产品拥有最终解释权，不承担任何因误解而产生的后果。

退换货服务

退换货

- 如果您对从线上授权购物平台和线下授权经销商所购买的AUTOTOL产品不满意，根据《AUTOTOL全球销售条款》，您可以自收到产品之日起七日内退货；或者在产品交付之日起的30日内调换等值的其他产品。
- 退回及调换的产品必须处于完全可销售状态，并附上相关销售单单据，所有相关配件、纸质发票（如有）。
- AUTOTOL将会对寄回退货的商品进行检查，以确保其处于完好无损的状态并且符合条件，相关条件详情请参阅《AUTOTOL全球销售条款》。任何未通过检查的商品将退还给您，您将不会获得商品退款。
- 您可以通过客户服务中心或AUTOTOL授权经销商调换产品；退换货原则为从哪里购买，就从哪里退换货。如果您退换货遇见困难或者阻碍，请联系AUTOTOL客户服务中心。通过客户服务中心退换货时，我们建议您通过下面的方式进行：

中国区域致电	400-032-0988 / 18929303778
售后微信号	18929303778
海外区域致电	+86 0755 23304822
E-mail	aftersale@autooltech.com
Facebook	https://www.facebook.com/autool.vip
YouTube	https://www.youtube.com/c/autooltech

- 如您的退换货得到确认，您将收到确认信息和邮件。



深圳市偶然科技有限公司

广东省深圳市宝安区航城锦驰产业园

📍 Hangcheng Jincheng Industrial Park, Bao'an, Shenzhen, China

🌐 www.autooltech.com

✉ aftersale@autooltech.com

☎ +86-755-2330 4822 / +86-400 032 0988



企业标准 / Corporate standard: Q/OR 003-2023